



• TRAIL CAMERAS

• HUNTING TABLET

• ACTION CAMERAS

& ACCESSORIES

SPYPOINT
QUICK START GUIDE
LINK-S
LINK-S-V (US ONLY)



SOLAR




www.cameratraps.co.za | info@cameratraps.co.za

VI.1

IN THE BOX & COMPONENTS

 Note: Memory card and batteries are sold separately.

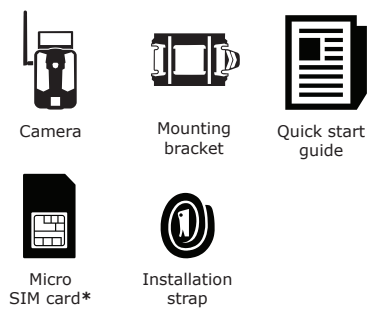

*SIM card is preactivated and inserted in the camera

- 1 Antenna

2 Solar pannel

3 LEDs

4 Photo lens

5 Light sensor

6 Viewing screen

7 Detection lens

8 Test light

9 Navigation buttons

10 ON / OFF Switch

11 SD card slot
- 12 Battery case & Micro SIM card slot

13 Slot for installation strap

14 Locking latch

 
15 Cable lock hole

16 12V jack

17 Microphone

18 Tripod mount

19 Battery door push button

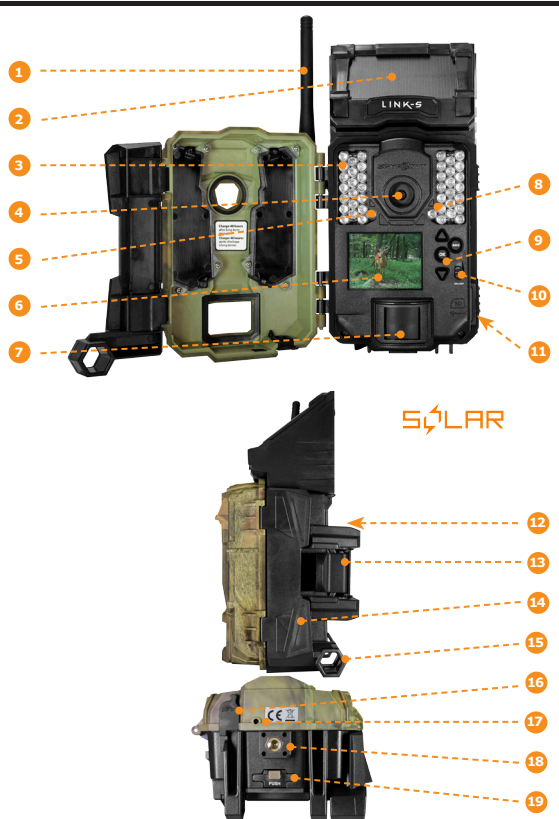

CAMERA BASICS

REMOVE CAMERA FROM THE MOUNTING BRACKET

- Push the tab to release the camera from the mounting bracket.
- Remove the camera.

CHARGING THE INTERNAL BATTERY

First, look at the internal battery percentage in the DETECTION TEST menu. If the percentage is low and the battery logo is not green, you will need to charge the camera for 24-48 hours before use. While charging, make sure the camera is turned off and the solar panel is facing down so it does not interfere with the USB charging process.

 
Plug the cable from the 12V port at the bottom of the camera and connect it to a USB port. (ex. USB power adaptor or a computer that will stay awake while charging) Once plugged, the screen will turn on and it will show the charging battery level for 10 seconds. Press the OK button once more to see the battery level reappear.

OPTIONAL: ADD A SECONDARY POWER SOURCE

An optional power source can be added as a backup to the internal battery for maximum protection. You can either use 8 alkaline or lithium AA batteries; our LIT-09/LIT-C-8 lithium battery pack; or an external 12V power source.


To open the battery compartment door for the AA batteries or our lithium battery pack, push the button under the camera. Do not mix battery type - use ALL alkaline or ALL lithium. Rechargeable AA batteries are not recommended as the lower voltage they produce can cause operational issues.

! Observe the proper battery polarity orientation according to the (+) and (-) marks when installing AA batteries.



INSERT THE MEMORY CARD

 Before inserting or removing a memory card, always turn off the camera to prevent loss or damage of the photos already recorded.



! Insert an SD/SDHC memory card (up to 32 GB capacity) in the card slot, gold contacts facing down as shown on the camera. The card is inserted correctly when a click is heard.

We suggest to format your SD card if it's been in another electronic device to make sure you will have the maximum capacity of your memory card.

IMPORTANT TO DO
BEFORE THE END OF THE 30-DAY FREE TRIAL

In the LINK app, go activate your plan under the Account tab. For more details about the available plans, look at the Account tab in the App or follow the link below. If you choose not to activate a plan, note that you'll still be able to transmit/receive pictures with our FREE monthly plan. It will allow you to transmit/receive up to 100 photos per month with a photo history of the last 7 days.

WWW.SPYPOINT.COM/PLANS

THANK YOU
for choosing
SPYPOINT

Our goal is to design & manufacture innovative, premium products for the hunting industry and to cater to all hunters passionate about the lifestyle that is hunting. We strive on offering all customers a positive, user friendly experience that will have a lasting impression.

Join the community



GETTING STARTED

INSTALL THE FREE SPYPOINT LINK APP



The SPYPOINT LINK App lets you connect and control your camera remotely using a smartphone or tablet. Features include viewing your camera status, pictures, full camera control and more.

Note: If you don't have a smartphone or a tablet, please contact our customer service to activate your camera.

Call us at our toll free number: 1-888-779-7646

Install the free App

1. Make sure you have a data package with either your smartphone or tablet or a Wifi connection.
2. To install the App, you can either:
 - Get it on Google Play™ (*Google Play is a trademark of Google Inc*)
 - Download on the App Store™ (*App Store is a trademarks of Apple Inc.*)
3. Search for the SPYPOINT LINK App from SPYPOINT.
4. Install the App on your smartphone or tablet.

Run the SPYPOINT LINK APP

Start the app and it will walk you through a few questions. Press the button at the bottom of the screen once you have finished. You will then receive an email confirming the activation.

Once in the app, you will have the following 4 options at the bottom:



Account

Select the data plan and modify your profile informations.



Status

See general informations like the cellular signal strength, battery level or percentage of space used on your SD card.



Settings

Modify the mode of the picture settings, the synchronisation frequency & all others



Photos

Let you see your pictures by date, month and years. Also let you share or download the photo.

Note: If you have more than one camera, it will let you select the camera name with the white bar with a scrolling menu at the top of the screen

SETTING THE APP

The SPYPOINT App lets you configure all your settings of the camera. These new settings will take effect the next time the camera connects to update its status.

BASIC SETTINGS

Mode - PHOTO

Delay: Sets the time interval between each detection before the camera records the next photo

Multi-shot: Takes up to 3 consecutive shots at each detection, with a 5 second delay between each photo.

Sensitivity: Sets the detection sensitivity of the camera.

Mode - TIME LAPSE

Interval: This option allows the camera to take photos at regular preset intervals without detection.

Mode - VIDEO

Delay: Allows the user to choose the time interval between each detection before the camera can record the next video.

Sensitivity: Sets the detection sensitivity of the camera.

Photo first: When this option is enabled, a photo is taken immediately before each video.

Video length: Allows the user to select the duration of the recording.

SYNCHRONISATION SETTINGS

Cellular: Turn the transmission of pictures ON or OFF

First sync time: Allows the user to choose at what time of the day the camera communicates for the first time

Sync frequency: Allows the user to choose the number of synchronizations that the camera performs in a daily.

ADVANCED OPTIONS

Date format: Allows the user to set the date format as Month/Day/Year or as Day/Month/Year


Temp. unit: Allows the user to select the temperature display.

Night mode: Allows the user to set the best option for photos.

	OPTIMAL MODE	IR-BOOST MODE	BLUR REDUCTION MODE
Battery life	★★★★★	★★★★★	★★★★★
Flash range	★★★★★	★★★★★	★★★★★
Blur reduction	★★★★★	★★★★★	★★★★★

INSTALLATION OF THE CAMERA

 Install the camera with or without the mounting bracket:

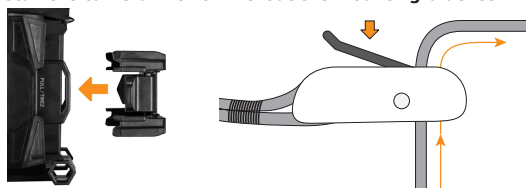

Recommended installation height:

The camera should be installed at the same height as the animal's mid-body.

Ideal installation for quality pictures & videos:

The targeted animal should be 25 feet / 7.5m away from the camera for a better field of view.

To get brighter pictures at night, you should have elements in the background to reflect back the IR flash to the camera.

START THE CAMERA

 


We suggest to format your SD card if it's been in another electronic device to make sure you will have the maximum capacity of your memory card.

Turn On the camera and let it do the network search as it can take a few minutes. Once the network search will be completed, you'll see the signal strength appear. If you have no signal, move outside or get near a window and restart the camera a few times if need be to get all the information from the cell network.

Note that the signal bars on a LINK-S might not be equal to your other cellular devices as there's no industry standard and practice to label dBm values to a specific number of bars.

Click on Start Camera and select the desired operating mode (photo, time lapse or video) in the Mode menu by pressing OK. If you start the camera in Video mode, make sure that you have enabled the Photo First setting.

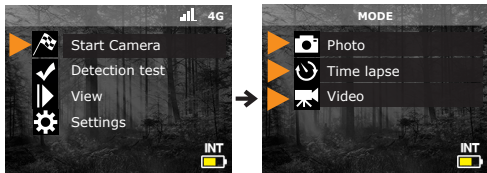

When the mode is selected, the test light in front of the camera will flash for 30 seconds to allow the user to leave the area without being photographed or recorded.

 
The camera has now updated its status in the LINK app with its latest informations. The camera is now ready to take pictures and transmit them to your LINK app upon the next synch. Synchs are set by default to every 4 hours from midnight.

IMPORTANT TO DO BEFORE THE END OF THE 30-DAY FREE TRIAL

In the LINK app, go activate your plan under the Account tab. For more details about the plans available, look either in the Account tab or follow the link below. If you choose not to activate a plan, note that you'll still be able to transmit/receive pictures with our FREE monthly plan. It will allow you to transmit/receive up to 100 photos per month with a photo history of the last 7 days.

WWW.SPYPOINT.COM/PLANS

SIT BACK, RELAX & KNOW YOU'RE COVERED



YOUR PATIENT WITNESS

CAMERA TRAPS cc

+27(0)83 560 0555
+27(0)82 422 0356

info@cameratraps.co.za
www.cameratraps.co.za