



**SPARTAN SR2-BK (Black Flash)**

## ***User Manual***



**PLEASE READ CAREFULLY BEFORE USING CAMERA**

Est. 2007




YOUR PATIENT WITNESS


[www.cameratraps.co.za](http://www.cameratraps.co.za)

## Package Contents

Mounting Strap	1	Trail Camera	1
User's Manual	1	USB Cable	1


## Camera Body and Ports

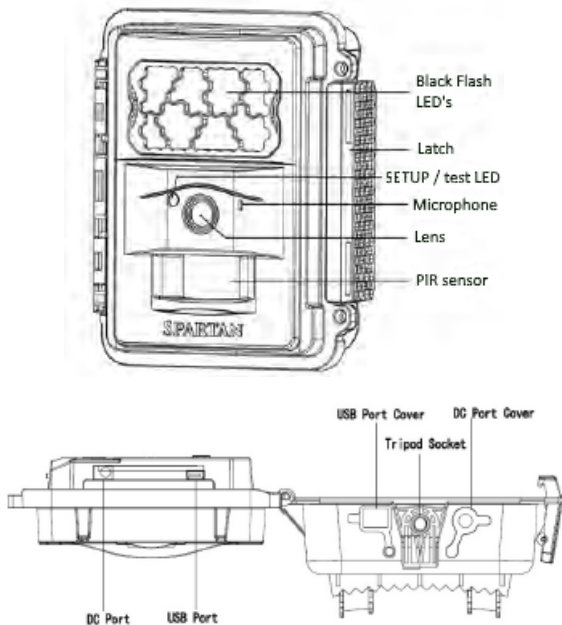

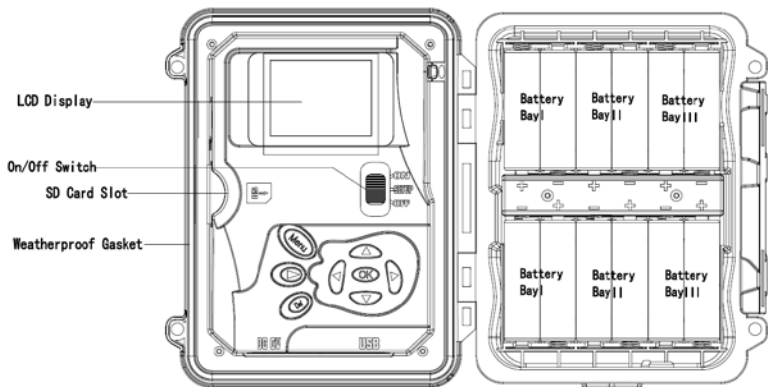

## Keys & Buttons

- **MENU:** Enter the program menu in preview mode
- **▲▼◀▶:** Move between the menu items and change the value
- **OK:**
  - Save parameter settings in menu mode
  - Play videos in playback mode







- Playback button  : In live preview window, switch between playback and preview mode
- **DEL**: delete an image in playback mode
- Use Shortcuts: In live preview window,
  - **▲** is the shortcut to choose **Video** mode, and
  - **▼** is the shortcut for the **Camera** mode
  - **OK** is for capture photos or record a video manually
- Mode (Power) Switch: ON at top. SETUP in the middle. OFF in the bottom.

### Quick Start

1. Make sure the power switch is at **OFF** position. Load the batteries into the battery compartment according to the polarities indicated. Load a set of 12 (recommended), 8 or 4 (emergency, left 2 columns) batteries. Or connect 6 V external power supply to the camera by using the correct cable and external battery.

The following batteries can be used:

- High-performance alkaline batteries
- Lithium batteries
- Rechargeable Ni-MH batteries

2. Insert a **standard size** SD card (32GB or smaller). Open the camera and insert the SD card into the card slot. Refer to the card symbol on the case for proper orientation. The camera supports up to 32 GB SD card. Please note that the SD-card should not be locked.
3. Slide the power switch to the SETUP position. The camera will enter the live preview mode.
4. Press  button to enter into the menu, then press ◀ or ▶ buttons to move between the tabs (submenu) which contains different group of items. Press the ▲ or ▼ buttons to activate the submenu and edit different items. Press ◀▶ to change the value. Press the OK button to save.
5. Press  button to exit from the submenu. Press the MENU again to exit from setup menu and enter the live preview mode.
6. Press the OK button to capture image or record video manually.
7. Press the playback button to playback. Use the ◀ or ▶ buttons to go through the images. Press ▲ or ▼ button to choose magnification times. Press OK and ▲▼◀▶ to move the magnified area.
8. Press Playback button  to exit.
9. While reviewing the image, press  button to delete the current image, or press  button to delete the current one or all the images.
10. Press Playback button  to exit the playback mode.
11. Place the camera at the target area and turn on the camera (slide the power switch to ON). The camera will take pictures or videos as programmed. The height from the ground for placing the camera should vary with the object size appropriately. In general, 3-6 feet is preferred.
12. Push the power switch to the OFF position to power off the camera. Please note that even in the OFF mode, the camera still consumes a

small amount of battery power. Therefore, please remove the batteries if the camera is not in use for an extended time.

### **MENU** Menu Settings

Switch the camera to **SETUP** mode & press **MENU**. Press ▲▼◀▶ to select the desired value. And then press **OK** to save.



Setting Items		Description
CAM	<b>Mode</b>	Choose to take Photo / Video / Photo+Video.
	<b>Photo Size</b>	Choose the image size, e.g. 3MP, 5MP or 8MP.
	<b>Photo Burst</b>	Choose the number of images taken after each trigger (1-3).
	<b>Burst Interval</b>	Choose the interval time length between the images taken in burst mode (Long / Short).
	<b>Video Size</b>	Choose the video resolution (640x480/1280x960)
	<b>Video Length</b>	Set the video length to the desired duration.

PIR	<b>Sensitivity</b>	Select between High, Low, Normal and OFF.
	<b>Trigger Interval</b>	The sleeping time after each trigger.


	<b>Time Lapse</b>	The camera can be triggered by timer at a preset time interval. Please note that even in Time Lapse mode, the camera still can be triggered unless the Sensitivity is set to OFF.
	<b>Start-Stop 1/2</b>	The camera can be set to operate only at specific time period. To enable this function select <b>ON</b> and press ok. The start-stop menu will then appear. This menu contains the settings for times to start and stop as well as the trigger interval and time lapse interval. The start-stop setting will override all other general camera settings. Since there are 2 periods available, make sure to not program times that overlap.

<b>SYS</b>	<b>Set Clock</b>	Enter to set the Date and Time.
	<b>Time Stamp</b>	ON /Off. Choose if the image stamp is to be shown or not.
	<b>Flash Power</b>	High / Low. Black Flash Power:
	<b>Format</b>	Format the SD card. This will erase all data on the SD card. This cannot be undone.
	<b>Overwrite</b>	ON/OFF. If ON, once the SD card is full, the camera will delete the oldest images / video and keep recording the new images / videos.
	<b>Default</b>	Restore all settings to factory default values.
	<b>Information</b>	Show version of firmware on the camera.
	<b>Password</b>	This option allows a 6 digits password to be set.

### **Playback Button (Viewing Photo or Video)**

- Switch to **SETUP** mode.
- Press Playback button  to view the latest picture (or video).
- Press OK button to start playing the video clips.
- Press OK button to stop playing and return to playback mode.
- Press ◀ button to view the previous image and press ▶ button for the next.
- Press the Playback button  playback button again to exit the playback mode.

### **Delete Photo or Video**

- Press Playback button  to view the image (or video) which to be deleted.
- Press **DEL** button.
- Press **LEFT** or **RIGHT** to select Yes to execute or No to Exit.
- Please note that after deleting a picture or a video file, the deleted files can't be restored!



## Technical Specifications

Picture Resolution	3MP, 5MP, 8MP
Video Resolution	640x480 / 1280x960
Modes	Photo / Video / Photo + Video
Trigger Time	0.4s
Lens	FOV (Field of View) = 52°
Flash Type	Black Flash (No Glow)
Flash Range	25m+
Display Screen	2.0" LCD
Memory Card	up to 32GB
Trigger	Motion (PIR) / Time Lapse / Time Lapse + PIR
PIR Sensitivity	Adjustable (High/Normal/Low/Off)
Temperature	-20°C to 60°C (Operation) -30°C to 70°C (Storage)
Trigger Interval	0s – 60 min
Time Lapse Interval	30s – 60s/1 min–60 min/1 hr - 8 hrs
Photo Burst	1–3
Video Length	1–30s
Power Supply	4×AA, 8×AA or 12AA / 6v External Power
Stand-by Current	< 0.20 mA (<5mAh/Day)
Sound Recording	YES
Mounting	Tripod/Mounting Strap/Python lock
Weight	0.8 lbs
Dimensions	15.24cm x 12.7cm x 8.89cm
Operation Humidity	5% - 90%

## **WARRANTY INFORMATION**

The Camera purchased from our authorized dealers is warranted to be free from defects in material and workmanship for 2 year from the original date of purchase under normal use. HCO Outdoor Products will, at its option, repair or replace your camera with the same or comparable model, free of charge (except you must pay for shipping charges set forth below), for a period of (1) one year from the original date of purchase in the event of a defect in materials or workmanship occurring with normal use. This warranty only extends to the original retail purchaser. Purchase receipt or other proof of date of original purchase is required before warranty performance. The warranty on any replacement product provided under this warranty shall be for the unexpired portion of the warranty period applicable to the original product.

\*Sorry but our warranty is ONLY applied to the cameras bought from our authorized dealers.

This warranty extends solely to failures due to defects in materials or workmanship occurring during normal use. It does not cover normal wear of the product. This warranty is void if: the product housing has been removed, if the product's label, logo or serial number have been removed or if the product fails to function properly as a result of accident, misuse, abuse, neglect, mishandling, misapplication, non-compatible batteries, faulty installation, setup, adjustments, improper maintenance, alteration, maladjustment of controls, modification, power surges, service by anyone other than HCO or HCO authorized service center or acts beyond the manufacturer's or distributor's control.

Note: The camera is not waterproof; please protect your camera properly for outdoors use.

Should your product prove defective during this warranty period, please contact us to obtain a RMA number prior to returning the defective unit.

\*RMA number is required for all returns.

Include \$11.95 for return shipping & insurance. (For U.S. customers only. CHECK OR MONEY ORDER ONLY PLEASE, NON-REFUNDABLE). If the product is beyond the warranty period, the price for repairing or replacing may vary. Please allow 6-8 weeks for delivery. International customers pay different amount of shipping & insurance. We will send detailed information along with the RMA number.

Include with your camera the RMA form and a copy of your dated cash register receipt or other proof of purchase.

The warranty work will not automatically extend the original warranty period.

The customer has 2 weeks to report any DOA (Dead on Arrival) products (please test product upon receipt).

If you have any questions regarding the warranty of HCO products, please send us an email at [support@hcooutdoors.com](mailto:support@hcooutdoors.com).

\*Please consult your dealer or us if you have any question or problem while you use the camera before you request a RMA number and send the camera back for repair. Some problems may be solved easily with help from our dealers or us.

## **CAMERA REPAIR**

Repairs for damages not covered by the warranty will be subject to a charge. Please contact HCO Outdoors to determine more information and to discuss repair options not covered under warranty.



SPARTAN  
CAMERA

## CUSTOMER SERVICE CONTACT

E-mail:

[support@spartancamera.com](mailto:support@spartancamera.com)

Website: [www.spartancamera.com](http://www.spartancamera.com)

Phone: 1-770-582-0004

11420 Johns Creek Pkwy

Building B

Duluth, GA 30097, USA

Est. 2007



*YOUR PATIENT WITNESS*

[www.cameratraps.co.za](http://www.cameratraps.co.za)

E-mail: [info@cameratraps.co.za](mailto:info@cameratraps.co.za)

Website: [www.cameratraps.co.za](http://www.cameratraps.co.za)

Phone: +27 (0) 83 560 0555

+27 (0) 82 422 0356

South Africa